

 
 
 
 
 
 
 
 
 
Lincoln Dashboard Symbols

Complete Reference Guide

Capital Lincoln of Wilmington • www.capitallincolnofwilmington.com

Dashboard Light Color Meanings

- Red/Orange: Urgent issues requiring immediate attention
- Yellow: Cautionary alerts, service may be needed
- Green: Positive indicators, feature ready or active
- Gray: Feature on but in standby mode
- Flashing: Urgent or escalating issue

 Adaptive Cruise Control Speedometer with car symbol and arrow. Adaptive cruise control is ready or active.	 Airbag Person in car seat side view with ball in lap. Airbags are active and functional.
 Anti-Lock Brake System (ABS) Letters "ABS" inside a circle with parentheses. If illuminated while driving, system needs service. You can still drive but get service ASAP to avoid losing control in challenging conditions.	 Auto Hold Hand in circle (with or without slash). Auto Hold system engaged/disengaged. Applies brakes to hold vehicle after stopping.
 Automatic High Beam Light rays with "A" in center. Automatic high beam system is active.	 Auto Start-Stop "A" with circular arrow (with or without slash). System reduces fuel consumption by stopping engine while idling.
 Battery Light Appears briefly at start-up. If illuminated while engine is running, indicates battery system issue requiring immediate service.	 Blind Spot Information System Car with waves and another car behind/side. Indicates system status or vehicle in blind spot.
 BRAKE Light (Brake System) Two icons: "BRAKE" text or exclamation point in circle. Red illumination means parking brake is engaged. If remains on after release, service needed.	 Check Engine Light (MIL) Malfunction Indicator Lamp. Bring vehicle in for diagnostics as soon as possible.
 Cruise Control Speedometer with arrow. Cruise control system ready or active.	 Door Ajar Overhead vehicle view with doors open. Indicates one or more doors not fully closed while ignition is on.
 Electric Parking Brake Exclamation point in circle or "P" in circle with parentheses. Yellow indicates malfunction; red warns to disengage before driving.	 Engine Coolant Temperature Thermometer in water waves. Engine coolant temperature too high. Pull over safely and shut off engine immediately.
 Fasten Seatbelt Person in seat with seatbelt across body. Reminder with tone to fasten seatbelts for safety.	 Front Fog Lamp Light rays with slash through them. Front fog lamps are activated.
 Headlamp High Beam Light rays with straight lines. High beam headlamps are on.	 Hill Descent Control Car on decline with speedometer. System controlling descent speed down steep terrain.
 Hill Start Assist Car on uphill grade in circle with parentheses. Prevents rolling backward on slopes.	 Hood Ajar Car with hood open. Hood is not completely closed and latched while vehicle is running.
 Lane Centering Car between lanes with steering wheel overlay. Keeps vehicle centered in lane during cruise control.	 Lane Keeping System Car between lines with arrows. Provides steering assistance for lane departures. <ul style="list-style-type: none">Gray: Temporarily unavailableGreen: Ready for warning/interventionOrange: Providing interventionRed: Providing alert
 Liftgate Ajar Vehicle with liftgate open. Liftgate not completely latched.	 Lincoln BlueCruise Car between lines with steering wheel overlay. Gray=inactive, Green=active steering support, Blue=hands-free mode available.
 Low Fuel Level Gas pump symbol. Time to head to the nearest gas station for refueling.	 Low Beam Warning Exclamation point in lightbulb with rays. Low beam headlamp requires service.
 Low Tire Pressure (TPMS) Exclamation point between parentheses (open top, closed bottom). One or more tires improperly inflated. Flashing may indicate monitoring system malfunction.	 Low Washer Fluid Level Curved icon with waves. Washer fluid level low, time for refill.
 Oil Pressure Dripping oil can icon. Low engine oil pressure. Service immediately to prevent significant engine damage.	 Parking Lamps Light symbol. Low beam headlamps or parking lamps are on.
 Pre-Collision Assist Car with crash symbol and arrow. System provides collision alerts/brake support. <ul style="list-style-type: none">Blue: Distance gap >82 feetYellow: Distance gap 39-82 feetRed: Distance gap <56 feet	 Powertrain Fault Double-sided wrench icon. Powertrain needs attention - avoid driving.
Stability Control Car with curved tire tracks. Appears at startup. If stays on while driving, indicates malfunction needing service.	Traction Control Stability control icon with "OFF" below. Traction control manually turned off or alternative mode selected.
Turn Signal Arrow indicators (left/right). Turn signals are in use.	

Important: This guide covers common dashboard symbols. Always consult your owner's manual for complete information.

 
For service appointments or questions, contact Capital Lincoln of Wilmington

www.capitallincolnofwilmington.com

Call Us | Service

(472) 212-0013

Located at 5406 Market Street, Wilmington, NC 28405 [Get Directions](#) >



SCAN ME



LINCOLN